

“The Door Switch” System Specific Programming

Programming can be performed using the Compass Software or a Deluxe Keypad
(*Reference the Control Panel’s Programming Guide*)

Programming Related to the Audible Alarm

- Strobe Relay Module and Switch Interface Module Programming
 - To activate an audible alarm when a door switch is actuated, program the Zone Type to 24 Hr. Audible Alarm.
- Control Panel Audible Alarm Output Programming
 - When using the audible alarm output from the control panel, supervise the wiring from the control panel to the audible alarm by programming the Zone Type of the Bell Supervision Zone to Trouble Day/Alarm Night.
 - When not using the audible alarm output from the control panel, program the Zone Type of the Bell Supervision Zone to No Response (Not Used).
- Supervised Notification Module Programming
 - To supervise the wiring from the supervised notification modules to the audible alarms, program the Relay Supervisory Zone Types to Day/Night Burglary.
 - To activate a specific audible alarm when specific door switches are actuated, program the Device Action to Close and Stay Closed, the Event to Alarm, the Start Zone assignments, and the Stop Zone Type to Disarming (Code + Off).

Programming Related to the Strobe Light

- Strobe Relay Module and Switch Interface Module Programming
 - To activate a specific strobe light when specific door switches are actuated, program the Device Action to Close and Stay Closed, the Event to Alarm, the Start Zone assignments, and the Stop Zone Type to Code + [#] + 71 Key Entry.

Programming Related to System Component Supervision

To supervise the wiring from the control panel to the Deluxe Keypad, Supervised Notification Module, and/or Panel Linking Module, program the Supervisory of ECP Device Zone Type to Day/Night Burglary.

Programming Related to Event Reporting

Program the Event Log Types to enable Alarm, Check, Bypass, Open/Close, and System to be reported in the date/time log.

Programming Related to the Deluxe Keypad Default Screen

Program the default screen on the deluxe keypad to read “THE DOOR SWITCH” for the top line of text and “SYSTEM ENABLED” for the bottom line of text.